

PS2.20 TDR20/QDR20 Touchscreen Room Display Interfaces (°C/°F, rH, VOC, CO₂, PIR)



The TDR20/QDR20 Touchscreen Room Displays are used together with the TCR80 series ceiling mounted room controllers. The room interfaces have colour touchscreen and integrated temperature measurement. The colour touchscreen can be used for the setpoint adjustment, changing the controller operating mode and fan speed. Configurable boost button also available. The touchscreen room displays can also have optional CO₂, VOC, humidity and occupancy monitoring.

In addition the BMS can send through the TCR80 series controllers additional information such as energy or water consumption figures, or outside air temperature readings.

Features

- 2.4" Colour Touchscreen Room Interface with Built-In Temperature Measurement.
- Setpoint, Fan Speed and Operating Mode Adjustment.
- Boost Button option overriding the space to Occupied Mode.
- Touchscreen is Customisable to the User Requirements.
- Optional CO₂ Measurement and Indication.
- Optional Relative Humidity Measurement and Indication.
- Optional VOC (Volatile Organic Compound) Air Quality Monitoring.
- Option for PIR Occupancy Sensor.
- Fast and Efficient USB-C cable connection to the TCR80 Ceiling Controllers (Power & Communications)
- Configuration wirelessly through Smart Config Windows Software or SmartPhone App (using Bluetooth Dongle).
- Available in both White and Black. The display has number of different skin colour options for customisation.
- User display language customisable using the language packs.

Technical Specifications

Power Supply:	Power:	5Vdc via USB-C Cable
Measurements:	Temperature:	
	Range:	0..50° (32..122°F)
	Accuracy:	+/-0.5°C
	CO2 (QDR Models)	
	Range:	0..10,000ppm
	Accuracy:	+/-50ppm + 5% of the reading
	Humidity (Option)	
	Range:	0..100%rH
	Accuracy:	+/-2%rH (within 20 to 80%rH)
	VOC (Volatile Organic Compound) (Option)	
	Range:	0..500 (Air Quality Index)
	PIR Movement (Option)	
	Type/Range:	Passive Infrared Movement Detection, Range up to 5m
Communication:	Physical Interface	RSRS485 driver with Modbus Connection
	Protocol:	Modbus RTU
	Addressing:	Via PC Device Configuration Tool, via SmartPhone Tool, or via Display (Default Address 1)
Display:	Touchscreen:	2.4" Full Colour Touchscreen Display with Glass Overlay, 240 x 320px
Mechanical:	Wiring Terminals:	USB-C Connector
	Enclosure:	ABS ULV0 Plastics - White or Black
	Mounting:	Wall or Junction Box Mounting (60mm screw distance)
	Dimensions	W86 x H86 x D24mm
Country of Origin:		United Kingdom

Model Selection


Refer to the below table to select the required model. The part number offers descriptive method for the product and options selection, and the SKU# number provides unique reference number. It is possible to order products using either.

Part Number		SKU# Number					
Example	TDR20-MOD-TS-RH-W	2000	1	02	01	00	02
Product Name		Product Code	Product Options				
TDR20	Touchscreen Room Display, Temperature Measurement	2000					
QDR20	Touchscreen Room Display, Temperature and CO2 Measurement	2100					
Serial Communication							
MOD	Modbus RS485		1				
User Interface							
TS	Colour Capacitive Touchscreen			02			
Measurement Options							
	No Extra Measurements					00	
RH	Relative Humidity					01	
RH-VOC	Volatile Organic Compound and Humidity					02	
OE	Passive Infrared Movement (PIR)					03	
RH-OE	Relative Humidity and Movement (PIR)					04	
RH-VOC-OE	VOC, Relative Humidity and Movement (PIR)					05	
Colour Options							
B	Black						01
W	White						02

Part Number	Description	SKU# Number
Accessories		
USB-C-CAB-6	6m USB-C Male to USB-C Male for Room Interface Units, Black	8510 0 00 0005 01
USB-C-EXT-6	5m USB-C Female to USB-C Male Extension Cable, Black	8520 0 00 0006 01

Wiring Connections

The diagram below illustrates USB-C connection to the Room Display Interfaces. Bring the USB-C cable through the Wiring Entry hole.

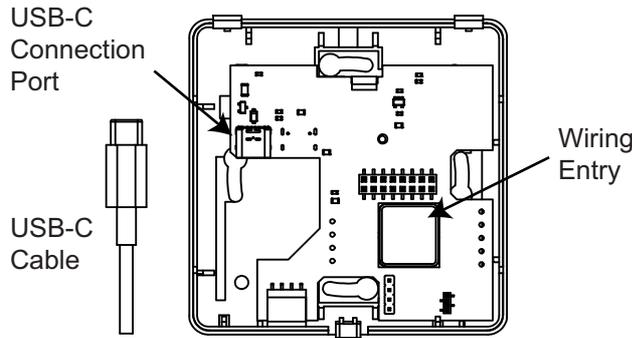

Device Configuration and Communications


The devices come with Modbus RTU communication available through the USB-C cable connection. The Modbus communication is used between the TCR80 series controllers and TDR/QDR20 Room Display Interfaces. The TDR20/QDR20 device address is a default set 1, allowing plug-and-play connection for the Zone 1 of TCR80 Series controllers.

The following display functions have been activated in default configuration:-

- Room Temperature Setpoint (All Models)
- Room Temperature (TDR20)
- CO2 Measurement (QDR20)
- Humidity Measurement (with RH option)
- Operating Mode (Unoccupied/Occupied/Off) Button
- Heating/Cooling Status Icon, Condensation and Temperature limitation Icons

The displays can be configured locally using via PC Based Smart Config Tool, or via Smart Phone Application. Using these methods the device settings can be altered to suit the site requirements.

The Windows Smart Config Tool and SmartPhone Application (iOS) are connected to the device using Bluetooth dongle set (BLE-TOOLSET, connection to the device illustrated below). The PC Device Configuration tool can also be used together with the isolated USB-SERIAL converter.

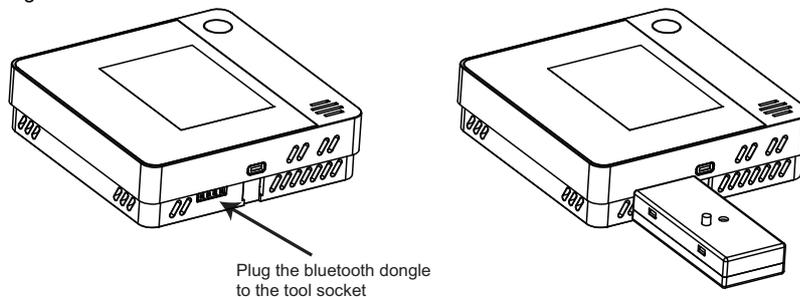

To connect the TDR/QDR20 to Zone 2 change the device address to 2 using using the abovementioned tools, or through the display menu.

Measurements

TEMPERATURE MEASUREMENT

The TDR/QDR room displays have built-in temperature measurement. The measurement can be displayed on the touchscreen.

NOTE: For accurate temperature measurement it is important that correct installation instructions are followed - see Dimensions and Installation Chapter.

CO2 (CARBON DIOXIDE) MEASUREMENT (QDR MODELS)


The QDR room displays have built-in CO2 measurement. The QDR CO2 sensor provides Automatic Self Calibration logic keeping measurement accurate over the time. The Automatic calibration can be disabled and the sensor can be manually calibrated (see Calibration Settings). The measurement is as default displayed on the touchscreen (can be hidden).

HUMIDITY MEASUREMENT (RH OPTION)

With TDR and QDR Displays can be fitted optional humidity sensor that provides 2% accurate relative humidity measurement. The measurement is displayed as default on the touchscreen (can be hidden).

RH-VOC VOLATILE ORGANIC COMPOUND MEASUREMENT (RH-VOC OPTION)

The VOC sensor option measures Volatile Organic Compounds with automatic humidity compensation providing relative indoor air quality index signal (see below diagram). The measurement can be displayed on the screen.

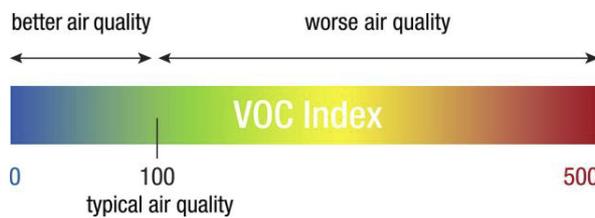


Measured air pollutants include harmful gases (acetone from paints and glues, toluene from furniture, mattresses and building products), other gases (ethanol from alcohol, perfumes and cleaners), odours (hydrogen sulfide and volatile sulfuric compounds from rotten food and farts; ammonia and amines from pet urine), smoke (benzene and nitrosamines from cigarette smoke).

MOVEMENT DETECTION AND CONTROL (OE OPTION)

The displays can be fitted with an optional pyroelectric infrared motion sensor for the movement and occupancy detection. The sensor element is designed for optimal usability and reliability with low power consumption, better sensitivity and signal-to-noise ratio reducing the false detections. The diagram illustrates the detection area.

The movement will override the operating mode between Occupied - Unoccupied/Off modes on the xDR20 series and this status is automatically reflected on the TCR80 series controllers.

The PIR movement sensor *Delay Off Timer* (10..28,800 seconds) parameter sets the time that the status latches ON after detection of movement.

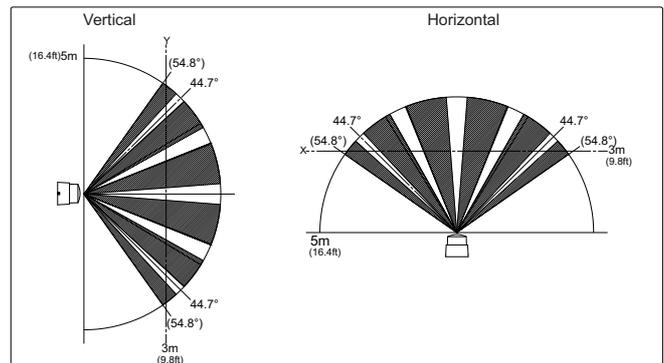

NOTE: Any new detected movement resets the timer. The movement sensor has 30 seconds warm-up delay on power up.

MULTI-TRIGGER MODE

The PIR mode can be changed to multi-trigger mode. In this mode during the *Trigger Period* the number of movement detections must reach the *PIR Trigger Count* amount for the controller to activate the Occupied Mode. If within the *Trigger Period* the trigger count is not reached, it is reseted to 0. After each movement detection, there is delay of 10 seconds until further movement is registered to the trigger count. This feature can be used, for example, prevent the system to switch on if a person enters temporarily to the room space. Available settings are shows in the table below.

Parameter	Description	Value Range / Enumerations
PIR Tigger Mode	Selects the Mode of the PIR Sensor	0 - Standard (default) 1 - Multi-Trigger
PIR Trigger Count	Trigger Count in Multi-Trigger Mode	1..10 (default 3)
Trigger Period	Trigger Period for monitoring Trigger Count	30..1,800 seconds (default 300 secs)
PIR Off Delay	Delay Off Timer for the PIR Movement/Occupancy sensor	10..28,800 seconds (default 600 secs)
Operating Mode Off Action	Operating Mode when the PIR (OE-option) does not detect movement.	0 = Unoccupied Mode (Default) 1 = Off Mode

Colour Touchscreen

The xDR20 Series Touchscreen is used to show the TCR80 series controller status information and built-in measurements. The touchscreen also provides the user interface for changing the TCR80 controller settings. The touchscreen display elements can be tailored to the site specific requirements.

TOUCHSCREEN DISPLAY (SKIN COLOUR SELECTABLE)

TOUCHSCREEN DISPLAY (SKIN COLOUR SELECTABLE)

Menu Icon - Press For Settings, Dim and Lock

Additional Icons Displayed after Pressing Menu

Action Bar with Buttons

TOP MENU BUTTONS

- Menu Icon (Access to settings, screen lock and dimming)
- Access to Configuration
- Button to Dim (no backlight)
- Button to Lock Screen (no access)

ACTION BAR BUTTONS

- Fan Speed Selection Button
- Mode Selection Button
- Boost (Timed) Button

STATUS BAR ICONS

- Menu Icon (Access to settings and dimming)
- Fan Speed Indication
- Occupied / Unoccupied / Night - Off
- Screen Locked
- Heating / Cooling
- Limit Function / Frost Mode
- Condensation

MAIN DISPLAY LOCATIONS

- Alarm Indication
- Descriptive Text Indication (Low / Normal / High)

Setpoint Adjustment view displayed

Text 'Set' indicating setpoint (press to change)

The touchscreen is divided to three different main elements; Status Bar, Measurement/Setpoint Display Locations and Buttons (accessible on the Action Bar on the bottom or via the Menu Icon on the top).

The Status Bar Indicates the controller status.

- Heating / Cooling Mode
- Limit Function / Frost Mode
- Unoccupied / Occupied / Off
- Fan Speed
- Lock Icon
- Condensation Icon
- Menu


The TDR20/QDR20 displays have up to 5 different Measurement/Display Locations that can be tailored to show different measurements and show/hide the room temperature setpoint.

The display locations can also show alarm indications and additional information (energy, water usage) from the network. It is also possible to configure actual measurements to be in 'Descriptive Text' mode that makes the measurement information descriptive.

Each of the four display locations can be configured to show

- Zone Temperature Loop Setpoint
- CO2, VOC, Temperature, or Humidity Measurement
- Network Signals (e.g. Energy, Water Consumption, Pressure)
- Alarm Conditions of the Measurements (Green, Amber, Red)

- Descriptive Text instead of Measurement Value (Low / Normal / High)
- The description and units of each location can be customised
- Using Language Pack it is possible to change the text language
- The skin colour of the display can be changed according to the preference; White, Blue, Green, Grey and Black
- Brightness of the display can be adjusted
- Action Bar can have Boost button with an adjustable timer (overrides the controller output as configured), Fan speed adjustment option (A - 0 - 1 - 2 - 3), and/or Mode Button (selecting between Occupied / Unoccupied and Night Off modes)
- The display can be dimmed through the Menu button
- The display can be locked from unauthorised access through the Menu button
- Menu Button provides access to the Configuration Menu (network settings)

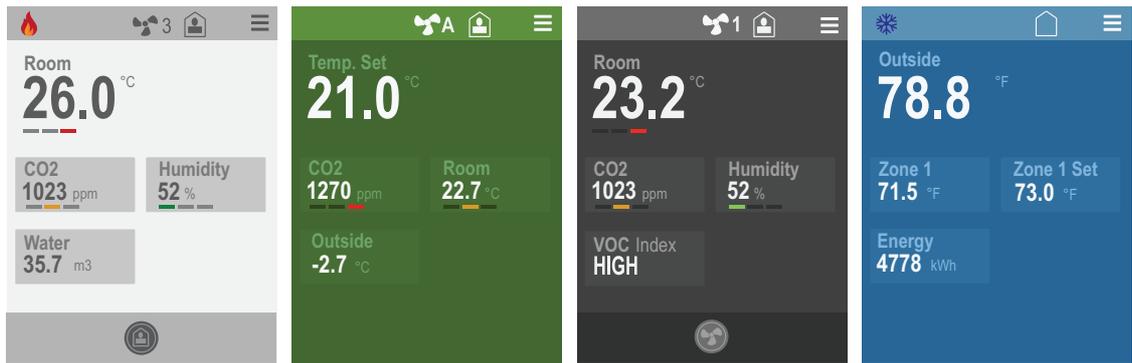

OPERATING MODE


The TDR20/QDR20 Room Display Interfaces are used to control the operating mode on the TCR80 Series controllers. The operating mode states are:-

- Occupied (Comfort)
- Unoccupied (Relaxed)
- Off (Night)

The operating mode is changed via the touchscreen, via PIR Occupancy Sensor (-OE option), or by the TCR80 controller over the USB-C network connection.


NOTE: The PIR movement sensor (-OE option) changes the controller mode both with On and Off transitions.

NOTE: On power up the display starts in Occupied (Comfort) mode (once the communication between the TCR80 and TDR/QDR20 is established, the TCR80 will automatically transmit current state to the display). If OE-option is fitted the xDR20 starts in unoccupied/off mode.

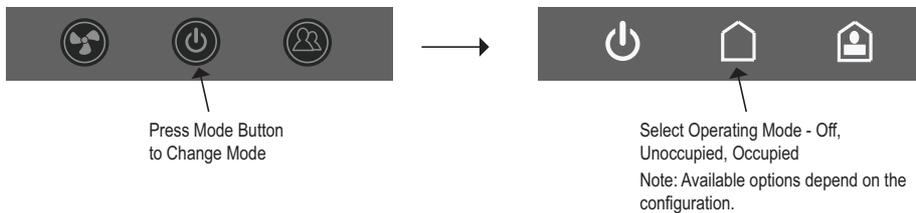

SETPOINT ADJUSTMENT

The display is as default configured to show the temperature setpoint. This shows the current calculated setpoint used by the TCR80 series controllers. The setpoint can be adjusted through the plus and minus buttons within the minimum and maximum adjustment limits (configurable). The adjustment steps (resolution) can also be controlled.

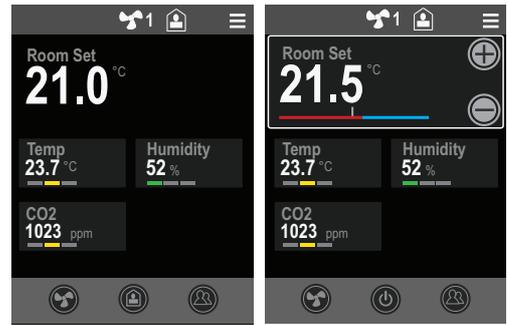


FAN SPEED DISPLAY/ADJUSTMENT

The current fan speed can be displayed and adjusted through the TDR20/QDR20 touchscreen. The fan speed display / adjustment has the following options:-

- Disabled (no fan speed is shows).
- Display Only (the fan speed is displayed on the status bar on top).
- Touch-0-1-A (fan speed adjustable between off, speed 1 and auto). In auto the fan speed is determined by the TCR80 series control logic demand.
- Touch-0-1-2-A (fan speed adjustable between off, speed 1, speed 2 and auto).
- Touch-0-1-2-3-A (fan speed adjustable between off, speed 1, speed 2, speed 3 and auto).


With the Touch configuration options by pressing the Fan button the fan speed adjustment is displayed on the screen. If *Alternate Fan Adjust* parameter is disabled the fan speed is selected by from the bottom action bar. If *Alternate Fan Adjust* parameter is enabled, the fan speed is adjusted using plus and minus buttons

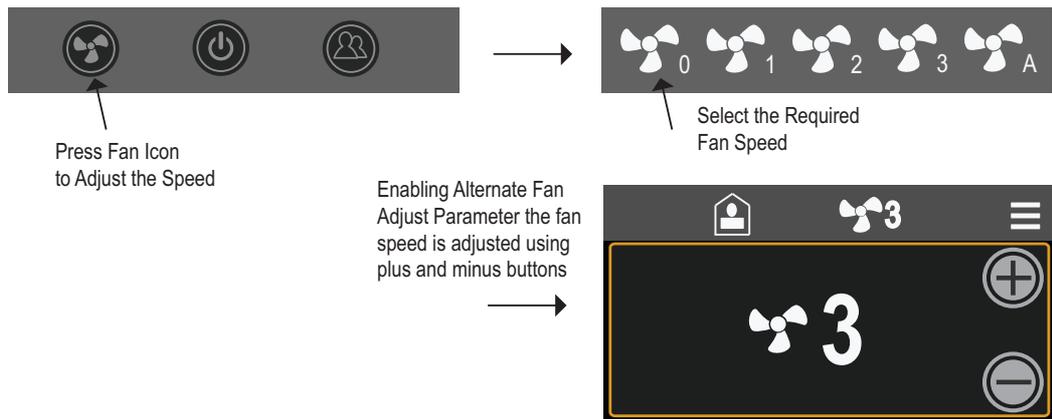

BOOST BUTTON (TIMED)


It is possible to activate the Boost button on the display via *Enable Boost Button* parameter. By pressing the Boost Button the TDR20/QDR20 activates the Occupied Mode which the transmitted to the TCR80 series controllers. When the Boost is active the Button Colour Changes. The boost button has adjustable timer between 0..28,800 seconds. By setting boost time to 0 seconds, the Boost is permanent. The boost can be cancelled by pressing the boost button again.

When the Boost is cancelled (by pressing the button or on timeout), the TDR20 returns to the Operating Mode prior to the Boost.

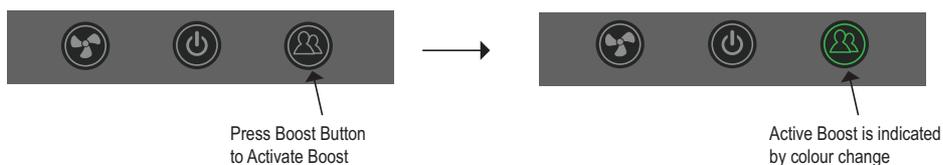

DISPLAY STATUS ICONS


The TDR/QDR20 room display interfaces show the TCR80 Series controller status information to the user on the status bar. These icons are activated/deactivated automatically by the TCR80 series controllers.

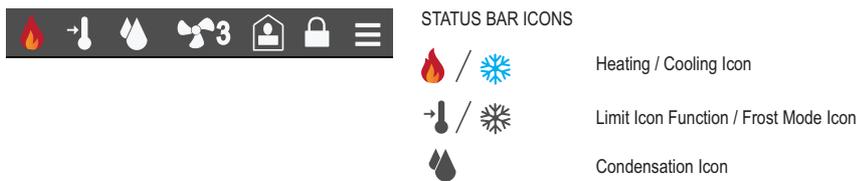


TRAFFIC LIGHT ALARM FUNCTION

Each of the 5 locations can be activated to display alarm condition based on the Amber and Red Limits. When measurement is above the Amber Limit, the location goes to Amber alarm (amber bar icon, or amber skin colour). When measurement is above the Red Limit, the location goes to Red Alarm (red bar icon or red skin colour).

ALARMING USING BAR DISPLAY

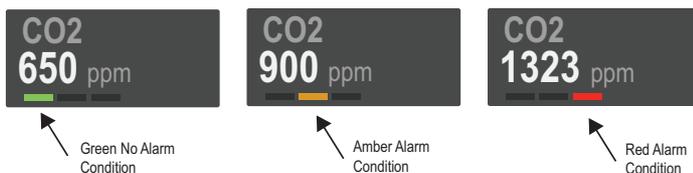


ALARMING USING SKIN COLOUR

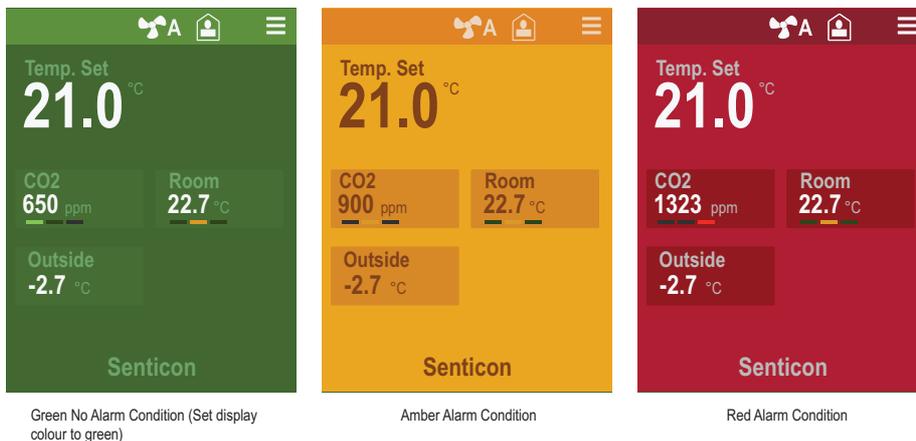


SCREEN LOCK

By selecting the Lock icon from the menu bar the screen is locked (buttons disabled, except menu and lock icons). If the Lock code is 0000, no code is required to lock and unlock the screen. By setting the lock code to any other value, the user needs to enter the code to lock and unlock the screen.

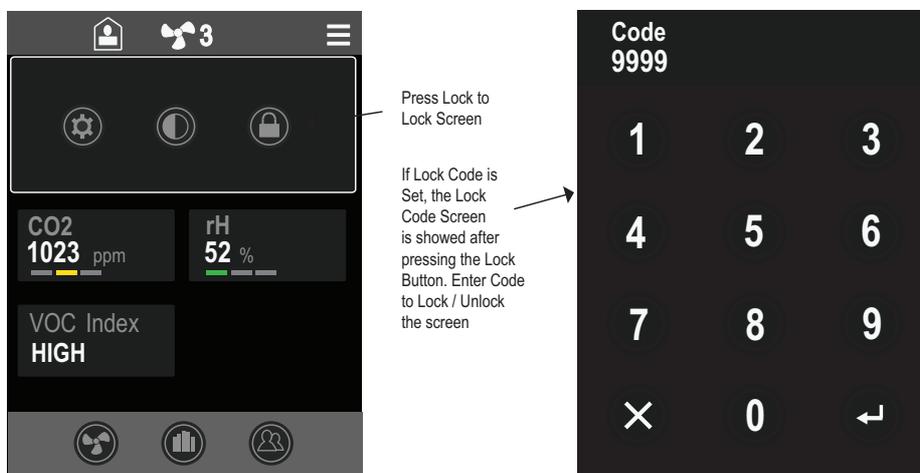

CONFIGURATION SCREEN

To access the Configuration Screen (for network settings), Press the Configuration Icon. If the configuration code is set, default 8000, the Configuration Menu is displayed where the Sensor Zone can be selected. If the code is set to 0000 then no passcode is required. To store the new configuration settings in the Non Volatile memory press the back arrow to return to the main screen.

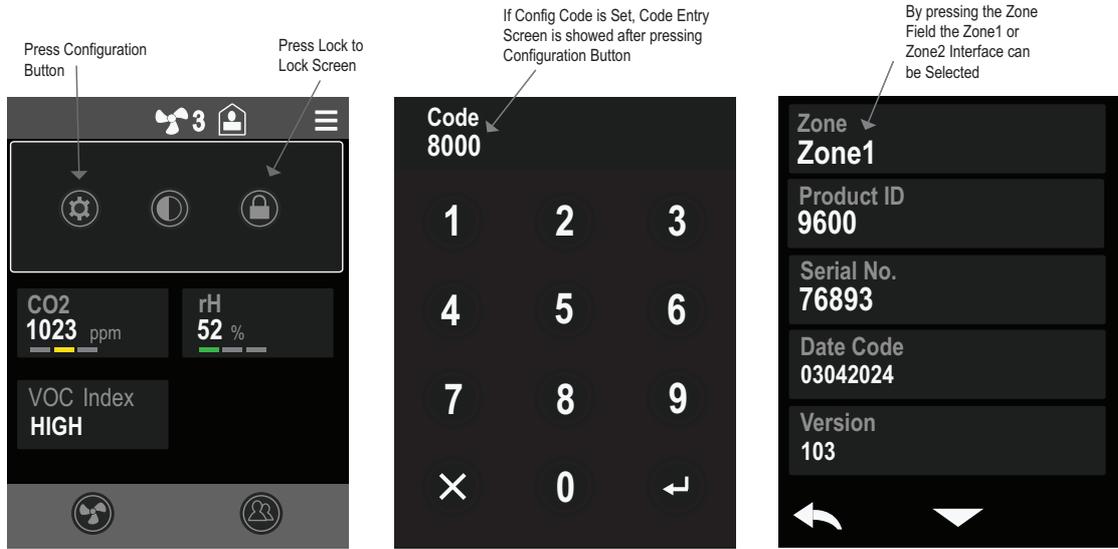

Device Parameters (Modbus Registers)

The following tables explain the device configuration parameters available.

LIVE DATA						
		MODBUS INPUT REGISTERS - FUNCTION CODE 04 MODBUS HOLDING REGISTER - FUNCTION CODES 03, (06), 16				
Parameter	Description	Reg	Type	Data Range (multiplier)	Value Range / Enumerations	R/W
Temperature Sensor	Displays current temperature measurement reading (built-in sensor) Note: Value depends on the temperature unit °C/°F selection	400	int16	-400..2480 (x10)	-40.0..120.0°C / -40.0..248.0°F	R
Humidity Sensor	Diplays current humidity measurement reading (With RH option)	401	int16	0..1000 (x10)	0..100%rH	R
CO2 Sensor	Displays current measurement CO2 reading (QDR20)	402	int16	0..10,000 (x1)	0..10,000ppm	R
VOC Sensor	Display current VOC (Volatile Organic Compound) Index Value	403	int16	0..500 (x1)	0..500 index	R
Fan Level	Current Fan Level (Range depends on the fan mode configuration). The fan level can be set from touchscreen or from TCR80 series.	417	unit16	0..4	0 = Off 1 = Speed 1 2 = Speed 2 3 = Speed 3 4 = Automatic	R/W
Calculated Setpoint	Calculated Setpoint (Nominal Network Setpoint + User Adjustment)	418	uint16	-32000..32000 (x10)	-3200.0..3200.0	R
Control Mode	Reports Current Control Mode Status	424	int16	0..2 (x1)	0 = Occupied 1 = Unoccupied 2 = Off	R
		DISCRETE INPUTS - FUNCTION CODE 02				
Boost Status	Boost Button Status - Shows if Boost Button has been activated by the user.	204		0..1	0 = No Boost 1 = Boost	R
Screen Lock Status	Screen Lock Status	205		0..1	0 = Not Locked 1 = Locked	R

CALIBRATION SETTINGS						
Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
Temperature Offset	Built-In Temperature Single Point Sensor Calibration Offset	580	int16	-100..100 (x10)	-10.0..+10.0deg (Default 0)	R/W
Humidity Offset	Humidity Single Point Calibration Offset	581	int16	-100..100 (x10)	-10.0..+10.0%rH (Default 0)	R/W
CO2 Offset	CO2 Single Point Calibration Offset (adjusts CO2 reading the specified amount)	582	int16	-500..500 (x1)	-500..+500ppm (Default 0)	R/W
CO2 Auto-Calibration	Shows if the auto-calibration of the CO2 has been Activated	583	uint16	0..1	0 = Disabled 1 = Enabled (Default)	R/W
CO2 Calibration Value	Single Point Calibration Value for the CO2 Sensor. Note: Writing this value will reset the calibration settings of the sensor to the value set. Only recommended for advanced users.	584	uint16	350..3,000 (x1)	350..3,000ppm	R/W
Force CO2 Calibration	Forces CO2 Calibration to the CO2 Calibration Value. Use when CO2 level known e.g with calibration gas or outside air.	585	uint16	0..1	0 = None 1 = Force Calibration	R/W
CO2 Calibration Persist	Store CO2 Calibration Settings in the Permanent Memory	586	uint16	0..1	0 = None 1 = Save Data	R/W

DISPLAY SETTINGS						
Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
GENERAL						
Display Colour	Sets the display colour (display skin).	600	uint16	0..4	0 = White 1 = Green 2 = Blue 3 = Grey (default) 4 = Black	R/W
Display Brightness	Controls display brightness. By setting to Off, the display switches off after the timeout. Display wakes up when it is touched (TS models only)	601	uint16	0..6	0 = Off 1 = 5% 2 = 10% 3 = 25% 4 = 50% (default) 5 = 75% 6 = 100%	R/W
Temperature Units	Selects between Celcius and Fahrenheit Note: The display and network measurements will automatically reflect reading in the selected units.	522	uint16	0..1 (x1)	0 = Celcius (Default) 1 = Fahrenheit	R/W
Temperature Display Resolution	Sets temperature display resolution (for built-in sensor only)	602	uint16	0..2 (x1)	0 = Fine (0.1°C/F) 1 = Normal (0.5°C/F) 2 = Coarse (1°C/F)	R/W
Mode Icon Display	Activates Mode Icon display on the top status bar (Occupied / Unoccupied / Off).	603	uint16	0..1	0 = Disabled (default) 1 = Enabled	R/W
Enable Fan Display	Enables Fan Speed Display and/or Fan Speed Button for touchscreen models.	605	uint16	0..4	0 = Disabled (default) 1 = Display Only 2 = Touch-0-1-A 3 = Touch-0-1-2-A 4 = Touch-0-1-2-3-A	R/W
Alternate Fan Adjust	Alternative Fan Speed Adjustment setting. Uses the temperature setpoint adjustment location with +/- buttons	609	uint16	0..1 (x1)	0 = Disabled (Default) 1 = Enabled	R/W
Enable Mode Button	Enables the Mode Button on the action bar.	607	uint16	0..3	0 = Disabled 1 = Occupied / Unoccupied 2 = Occupied / Unocc/ Off (default) 3 = Occupied / Off	R/W
Enable Boost Button	Enables Boost Button on the bottom action bar	608	uint16	0..1	0 = Disabled (default) 1 = Enabled	R/W

Lock Code	Screen Lock Code - 0000 = User requires no code to lock the screen	613	unit16	0..9,999 (x1)	0..9,999 (Default 0000)	R/W
Screen Lock Override	Overrides the Current State of the Screen Lock	614	unit16	0..2 (x1)	0 = No Override 1 = Unlock Screen 2 = Lock Screen	R/W
Configuration Code	Code to Enter Configuration Screen, Set to 0000 to bypass the requirement to enter the code.	615	unit16	0..9,999 (x1)	0..9,999 (Default 8000)	R/W

DISPLAY LOCATION 1 to 5 SETTINGS						
Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
DISPLAY LOCATION 1 (PRIMARY DISPLAY LOCATION)						
Location 1 Display	Location 1 Display Source. Sets what is displayed in Location 1.	620	uint16	0..7	0 = None 1 = Network Decimal Value 2 = Network Integer Value 3 = Temperature 4 = Humidity 5 = CO2 6 = VOC Index 7 = Temp Setpoint (Default)	R/W
Location 1 Description	Location 1 Description. Sets description for Location 1.	621	uint16	0..21	0 = None 1 = Temperature 2 = Humidity 3 = CO2 4 = VOC 5 = Light Level 6 = Pressure 7 = Room 8 = Outside 9 = Fan 10 = Energy 11 = Water 12 = Electricity 13 = Heating 14 = Cooling 15 = Zone 1 16 = Zone 2 17 = Temp. Set (Default) 18 = Aux. Set 19 = Room Set 20 = Zone 1 Set 21 = Zone 2 Set	R/W
Location 1 Unit	Location 1 Unit. Sets unit for Location 1.	622	uint16	0..9	0 = None 1 = °C (Default) 2 = °F 3 = ppm 4 = Lux 5 = Pa 6 = kWh 7 = m3 8 = % 9 = index (air quality index)	R/W
Location 1 Alarm	Activates Location 1 Alarm Bar, Alarm Skin Colour or Descriptive Text indication. Using 1=Bar activates Green, Amber, Red alarm icon indication underneath the current displayed parameter. Using 3=Text activates LOW, MEDIUM HIGH text indication instead of the measurement. Using 3= Skin activates the skin colour changing based on alarm condition.	623	uint16	0..3	0 = Disabled 1 = Bar 2 = Text 3 = Skin	R/W
Location 1 Red Alarm Limit	Red Limit for Alarm 1 / High Limit for Descriptive Display	624	uint16	0..10,000 (x1)	0..10,000 (default 30)	R/W
Location 1 Amber Alarm Limit	Amber Limit for Alarm 1 / Medium Limit for Descriptive Displays	625	uint16	0..10,000 (x1)	0..10,000 (default 25)	R/W
Location 1 Hysteresis	Hysteresis for Alarm 1 / Low Limit for Descriptive Displays	626	uint16	0..10,000 (x1)	0..10,000 (default 1)	R/W

		Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16			
Parameter	Description		Type	Data Range (multiplier)	Value Range / Enumerations	R/W
DISPLAY LOCATION 2						
Location 2 Display	Location 2 Display Source. Sets what is displayed in Location 2.	627	uint16	0..7	0 = None 1 = Network Decimal Value 2 = Network Integer Value 3 = Temperature (Default) 4 = Humidity 5 = CO2 6 = VOC Index 7 = Temp Setpoint	R/W
Location 2 Description	Location 2 Description	628	uint16	0..21	0 = None 1 = Temperature (Default) 2 = Humidity 3 = CO2 4 = VOC 5 = Light Level 6 = Pressure 7 = Room 8 = Outside 9 = Fan 10 = Energy 11 = Water 12 = Electricity 13 = Heating 14 = Cooling 15 = Zone 1 16 = Zone 2 17 = Temp. Set 18 = Aux. Set 19 = Room Set 20 = Zone 1 Set 21 = Zone 2 Set	R/W
Location 2 Unit	Location 2 Unit	629	uint16	0..9	0 = None 1 = °C (Default) 2 = °F 3 = ppm 4 = Lux 5 = Pa 6 = kWh 7 = m3 8 = % 9 = index (air quality index)	R/W
Location 2 Alarm	Activates Location 1 Alarm Bar, Alarm Skin Colour or Descriptive Text indication. Using 1=Bar activates Green, Amber, Red alarm icon indication underneath the current displayed parameter. Using 3=Text activates LOW, MEDIUM HIGH text indication instead of the measurement. Using 3= Skin activates the skin colour changing based on alarm condition.	630	uint16	0..3	0 = Disabled (default) 1 = Bar 2 = Text 3 = Skin	R/W
Location 2 Red Alarm Limit	Red Limit for Alarm 2 / High Limit for Descriptive Display	631	uint16	0..10,000 (x1)	0..10,000 (default 30)	R/W
Location 2 Amber Alarm Limit	Amber Limit for Alarm 2 / Medium Limit for Descriptive Displays	632	uint16	0..10,000 (x1)	0..10,000 (default 25)	R/W
Location 2 Hysteresis	Hysteresis for Alarm 2 / Low Limit for Descriptive Displays	633	uint16	0..10,000 (x1)	0..10,000 (default 1)	R/W

Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
DISPLAY LOCATION 3						
Location 3 Display	Location 3 Display Source. Sets what is displayed in Location 3.	634	uint16	0..7	0 = None 1 = Network Decimal Value 2 = Network Integer Value 3 = Temperature 4 = Humidity 5 = CO2 (Default) 6 = VOC Index 7 = Temp Setpoint)	R/W
Location 3 Description	Location 3 Description	635	uint16	0..21	0 = None 1 = Temperature 2 = Humidity 3 = CO2 (Default) 4 = VOC 5 = Light Level 6 = Pressure 7 = Room 8 = Outside 9 = Fan 10 = Energy 11 = Water 12 = Electricity 13 = Heating 14 = Cooling 15 = Zone 1 16 = Zone 2 17 = Temp. Set 18 = Aux. Set 19 = Room Set 20 = Zone 1 Set 21 = Zone 2 Set	R/W
Location 3 Unit	Location 3 Unit	636	uint16	0..9	0 = None 1 = °C 2 = °F 3 = ppm (Default) 4 = Lux 5 = Pa 6 = kWh 7 = m3 8 = % 9 = index (air quality index)	R/W
Location 3 Alarm	Activates Location 1 Alarm Bar, Alarm Skin Colour or Descriptive Text indication. Using 1=Bar activates Green, Amber, Red alarm icon indication underneath the current displayed parameter. Using 3=Text activates LOW, MEDIUM HIGH text indication instead of the measurement. Using 3= Skin activates the skin colour changing based on alarm condition.	637	uint16	0..3	0 = Disabled (default) 1 = Bar 2 = Text 3 = Skin	R/W
Location 3 Red Alarm Limit	Red Limit for Alarm 3 / High Limit for Descriptive Display	638	uint16	0..10,000 (x1)	0..10,000 (default 1250)	R/W
Location 3 Amber Alarm Limit	Amber Limit for Alarm 3 / Medium Limit for Descriptive Displays	639	uint16	0..10,000 (x1)	0..10,000 (default 750)	R/W
Location 3 Hysteresis	Hysteresis for Alarm 3 / Low Limit for Descriptive Displays	640	uint16	0..10,000 (x1)	0..10,000 (default 100)	R/W

Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
DISPLAY LOCATION 4						
Location 4 Display	Location 4 Display Source. Sets what is displayed in Location 4.	641	uint16	0..7	0 = None 1 = Network Decimal Value 2 = Network Integer Value 3 = Temperature 4 = Humidity (Default) 5 = CO2 6 = VOC Index 7 = Temp Setpoint	R/W
Location 4 Description	Location 4 Description	642	uint16	0..21	0 = None 1 = Temperature 2 = Humidity (Default) 3 = CO2 4 = VOC 5 = Light Level 6 = Pressure 7 = Room 8 = Outside 9 = Fan 10 = Energy 11 = Water 12 = Electricity 13 = Heating 14 = Cooling 15 = Zone 1 16 = Zone 2 17 = Temp. Set 18 = Aux. Set 19 = Room Set 20 = Zone 1 Set 21 = Zone 2 Set	R/W
Location 4 Unit	Location 4 Unit	643	uint16	0..9	0 = None 1 = °C 2 = °F 3 = ppm 4 = Lux 5 = Pa 6 = kWh 7 = m3 8 = % (Default) 9 = index	R/W
Location 4 Alarm	Activates Location 1 Alarm Bar, Alarm Skin Colour or Descriptive Text indication. Using 1=Bar activates Green, Amber, Red alarm icon indication underneath the current displayed parameter. Using 3=Text activates LOW, MEDIUM HIGH text indication instead of the measurement. Using 3= Skin activates the skin colour changing based on alarm condition.	644	uint16	0..3	0 = Disabled (default) 1 = Bar 2 = Text 3 = Skin	R/W
Location 4 Red Alarm Limit	Red Limit for Alarm 4 / High Limit for Descriptive Display	645	uint16	0..10,000 (x1)	0..10,000 (default 80)	R/W
Location 4 Amber Alarm Limit	Amber Limit for Alarm 4 / Medium Limit for Descriptive Displays	646	uint16	0..10,000 (x1)	0..10,000 (default 60)	R/W
Location 4 Hysteresis	Hysteresis for Alarm 4 / Low Limit for Descriptive Displays	647	uint16	0..10,000 (x1)	0..10,000 (default 1)	R/W

Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
DISPLAY LOCATION 5						
Location 5 Display	Location 5 Display Source. Sets what is displayed in Location 4.	648	uint16	0..7	0 = None 1 = Network Decimal Value 2 = Network Integer Value 3 = Temperature 4 = Humidity 5 = CO2 6 = VOC Index (Default) 7 = Temp Setpoint	R/W
Location 5 Description	Location 5 Description	649	uint16	0..21	0 = None 1 = Temperature 2 = Humidity 3 = CO2 4 = VOC (Default) 5 = Light Level 6 = Pressure 7 = Room 8 = Outside 9 = Fan 10 = Energy 11 = Water 12 = Electricity 13 = Heating 14 = Cooling 15 = Zone 1 16 = Zone 2 17 = Temp. Set 18 = Aux. Set 19 = Room Set 20 = Zone 1 Set 21 = Zone 2 Set	R/W
Location 5 Unit	Location 5 Unit	650	uint16	0..9	0 = None 1 = °C 2 = °F 3 = ppm 4 = Lux 5 = Pa 6 = kWh 7 = m3 8 = % 9 = index (Default)	R/W
Location 5 Alarm	Activates Location 1 Alarm Bar, Alarm Skin Colour or Descriptive Text indication. Using 1=Bar activates Green, Amber, Red alarm icon indication underneath the current displayed parameter. Using 3=Text activates LOW, MEDIUM HIGH text indication instead of the measurement. Using 3= Skin activates the skin colour changing based on alarm condition.	651	uint16	0..3	0 = Disabled (default) 1 = Bar 2 = Text 3 = Skin	R/W
Location 5 Red Alarm Limit	Red Limit for Alarm 5 / High Limit for Descriptive Display	652	uint16	0..10,000 (x1)	0..10,000 (default 150)	R/W
Location 5 Amber Alarm Limit	Amber Limit for Alarm 5 / Medium Limit for Descriptive Displays	653	uint16	0..10,000 (x1)	0..10,000 (default 110)	R/W
Location 5 Hysteresis	Hysteresis for Alarm 5 / Low Limit for Descriptive Displays	654	uint16	0..10,000 (x1)	0..10,000 (default 10)	R/W

CONTROL SETTINGS AND OVERRIDES						
Parameter	Description	Modbus Register / BACnet Property	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
SETPOINT SETTINGS						
Min Setpoint Adjustment	Minimum Setpoint Adjustment Limit for Setpoint	671	int16	-5000..0 (x1/x10)	-500.0..0 (default -3.0)	R/W
Max Setpoint Adjustment	Maximum Setpoint Adjustment Limit for Setpoint	672	int16	0..+5000 (x1/x10)	0.500.0 (default +3.0)	R/W
Setpoint Increment Adjustment	Setpoint Increment Adjustment	673	uint16	1..100 (x1/x10)	0.1..10.0 (default 0.1)	R/W
Setpoint Mode	Sets the setpoint user adjustment limits to use relative or absolute min/max settings.	669	uint16	0..1	0 = Relative - Default 1 = Absolute	R/W
Reset User Adjustment	Resets the user setpoint adjustments (multi-stage, aux and humidity loops) when operating mode transitions away from the Occupied mode.	675	uint16	0..1	0 = Off (Default) 1 = On	R/W
PIR MOVEMENT SENSOR SETTINGS						
PIR Trigger Mode	Selects the Mode of the PIR Sensor	681	uint16	0..1 (x1)	0 - Standard (default) 1 - Multi-Trigger	R/W
PIR Trigger Count	Trigger Count in Multi-Trigger Mode	682	uint16	1..10 (x1)	1..10 (default 3)	R/W
Trigger Period	Trigger Period for monitoring Trigger Count	683	uint16	30..1,800 (x1)	30.1,800 seconds (default 300 secs)	R/W
PIR Off Delay	Delay Off Timer for the PIR Movement/Occupancy sensor	684	uint16	10..28,800 (x1)	10..28,800 seconds (default 600 secs)	R/W
Operating Mode Off Action	Display Operating Mode when the PIR (OE-option) does not detect movement.	680	uint16	0..1	0 = Unoccupied Mode (Default) 1 = Off Mode	R/W
Boost Time	Delay Off Timer for the Boost Button	689	uint16	0..28,800 (x1)	0..28,800 seconds 0 = Timer disabled, toggle functionality (default)	R/W

SYSTEM AND COMMUNICATION SETTINGS						
Parameter	Description	Modbus Register	MODBUS HOLDING REGISTER - FUNCTION CODES 03, 06, 16		Value Range / Enumerations	R/W
			Type	Data Range (multiplier)		
Zone	Sets the Sensor Zone	800	uint16	1.2 (x1)	1..2	R/W
Force Reset	Forces Device Reset	810	uint16	0..1	0 = Normal 1 = Reset	R/W
Persist	Persist (Store Parameters in Non-Volatile Memory)	811	uint16	0..1	0 = Normal 1 = Persist	R/W
Factory Defaults	Reload Defaults (NOTE: Resets all settings to factory defaults)	812	uint16	0..1	0 = Normal 1 = Factory Defaults	R/W
Language Pack Enable	Enables the Language Pack (using language pack it is possible to change the user text entries on the screen)	814	uint16	0..1	0 = English 1 = Language Pack Enabled	R/W
Logo Timer	Time after which the Logo is displayed on the Display after background level is activated. Set to 0 to disable the logo.	815	uint16	0..255 (x1)	1..255 seconds 0 = Logo Disabled	R/W
Firmware Version	Firmware Version	820	uint16	N/A	N/A	R
Serial Number	Serial Number	821	uint16	N/A	N/A	R
Date Code	Date Code	822	uint16	N/A	N/A	R
Product ID	Product ID	823	uint16	N/A	N/A	R

Dimensions and Installation

The devices typically mounted on the flat wall surfaces or on the junction boxes. The enclosure has 56/60mm screw distance for standard mounting boxes.

Installation Notes:

- Follow the diagram below to open the enclosure to access the mounting holes and the wiring terminals.
- Install the sensors away from the sources of heat and cool e.g. from direct sunlight or cold external walls.
- Install the sensors at 120-150 cm height for optimal performance.
- For correct movement (PIR) sensor operation consider the location of the sensor carefully.
- Make sure that the cable entries and junction boxes are sealed from air flows. This is the most common reason for inaccuracies in temperature measurement.
- Bring the cables through the dedicated hole (black area) marked on the dimensions drawing.
- If surface mounted cable is required to be used, the top of the enclosure (center) has a thin wall section that can be cut.

DIMENSIONS

